

ASSEMBLY INSTRUCTIONS



MODEL 73652520FN Durango Magnetic Screen House 12' X 10'

SAFETY WARNING - DOs AND DO NOTs

EVERYONE WHO USES THIS SCREEN HOUSE SHOULD READ THIS MANUAL AND BECOME FAMILIAR WITH ALL SAFETY WARNINGS AND PRECAUTIONS FOR SAFE USE, ASSEMBLY, CARE, MAINTENANCE, AND STORAGE. KEEP THIS MANUAL SO YOU CAN REFER TO IT LATER.

WARNING

FLAMMABILITY WARNING : KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SCREEN HOUSE FABRIC.

This screen house is made with flame resistant fabric which meets CPAI-84 specification. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the screen house fabric may render the flame-resistant properties ineffective. For these reasons:

- DO NOT use matches, lighters, stoves, heaters, grills, lanterns, candles, cooking equipment, or other fuel-burning devices inside or near a screen house.
- DO NOT build fires inside or near a screen house.
- DO NOT leave campfires unattended.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

PROTECT YOUR CHILDREN

Children will not understand and appreciate safety warnings, and will not know how to avoid or respond to these hazards if no adults are present.

For these reasons:

- DO NOT leave children unattended inside a screen house or in camp.
- DO NOT allow children to assemble a screen house.
- DO NOT allow children to enter or exit a screen house except through the door.

Your failure to follow this warning will cause death, serious injury, or permanent disability to your children.

CARE

DO NOT LEAVE YOUR SCREEN HOUSE SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE SCREEN HOUSE ON CONCRETE FLOOR. DO NOT SPRAY THE SCREEN HOUSE WITH INSECTICIDE.

EXERCISE CARE WHEN USING ELECTRIC DEVICES IN AND NEAR SCREEN HOUSE.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-4121 or send an email to contactus@wenzelco.com. Have your model number or part number ready when you call. DO NOT ORDER BY REFERENCE KEY NUMBER.


Send your request for parts to:

Exxel Outdoors, LLC.

1 International Ct.

Broomfield, CO 80021

KEY NO.	MODEL 73652520FN Durango Magnetic Screen House 12' X 10'		QTY REQ
	DESCRIPTION	PART NO.	
A	Main Pole	73652520M	2
B	Ridge Pole	73652520R	2
	Complete Frame	73652520ST	1
	Door magnet	7363417DM	14
	Guy Rope	A1001	4
	Steel Stake	PIN STAKE	18
	Plastic Stake	7.25 STAKE	4

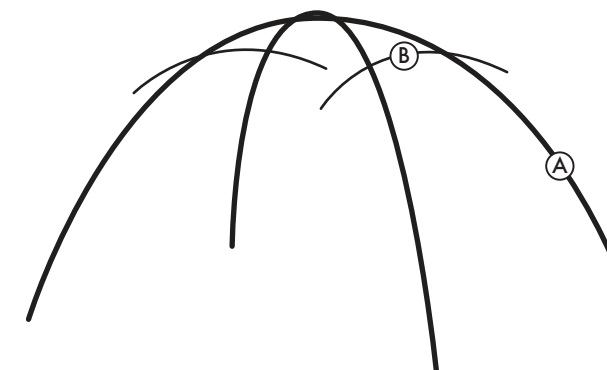

ASSEMBLY INSTRUCTIONS



MODEL 73652520FN Durango Magnetic Screen House 12' X 10'


IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE SCREEN HOUSE ONCE BEFORE USE TO BECOME FAMILIAR WITH THE ASSEMBLY.

NOTE: Please look at the replacement parts diagram to see how your frame is assembled.


STEP 1: Spread the screen house out flat with the pole sleeves facing up.

STEP 2: Extend the poles by pulling out each section and placing the ends into the metal ferrule connectors. You will have four poles. The two longer poles are the main poles (A). The two shorter poles (B) are the roof ridge poles.


STEP 3: While making sure the sleeves are in line with each other, slide each main pole (A) through the brown sleeves on the roof of the screen house. Position poles so that they form an "X" across the screen house.

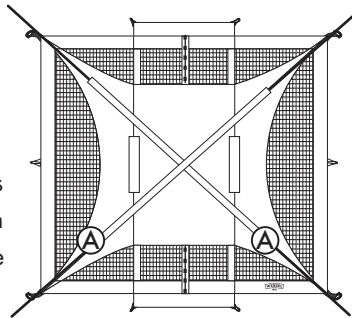


STEP 4: Slide the ridge poles (B) through the light tan sleeves across the roof of the screen house.

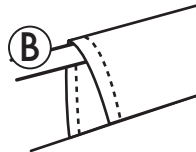


STEP 5: Go to the back corners of the screen house and place the ends of the poles onto the pins located on the rings at each corner.

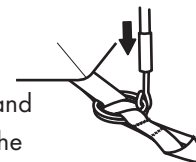


STEP 6: To raise the screen house, one person should go to each of the front corners. Flex the fiberglass poles into an upward position forming two arches and place the ends of the poles onto the pins at the corners.

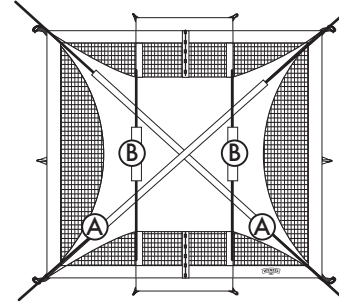


STEP 7: Locate the grommets on the webbing that are attached to the screen house above the two doors. Place one end of the ridge pole (B) into one grommet. Go to the other side of the screen house and flex the pole. Place the end into the grommet. Repeat this step for the second ridge pole. The tension of the webbing can be adjusted to optimize the magnetic door function once the screen house is set up.

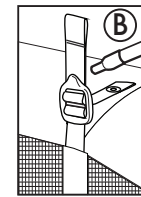

STEP 8: Clip the plastic hooks to the fiberglass frame poles.

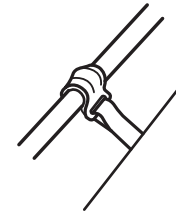



STEP 9: Stake down the screen house by inserting metal stakes through the stake loops at each corner of the canopy. Hammer the stakes into the ground at a 45° angle, making sure the canopy is pulled out even and snug.

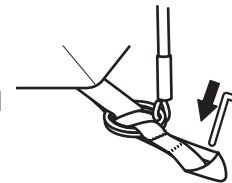


STEP 10: Stake down the door mats through the loops at all four corners and the metal grommets under each side of the door.

NOTE: For the magnetic doors to open and close properly it is important to stake down the door mats.

STEP 11: Guy ropes have been provided for the screen house. Extend the guy ropes and make a loop at the opposite end by using the slider (as shown). Stake the guy rope to the ground and adjust the slider to make guy rope tight. For additional stability wrap the webbing around the pole prior to extending the guy rope.

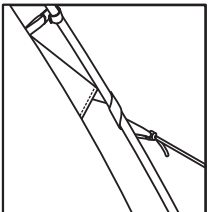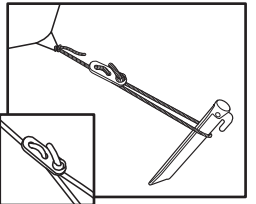

Screen house should appear as shown.

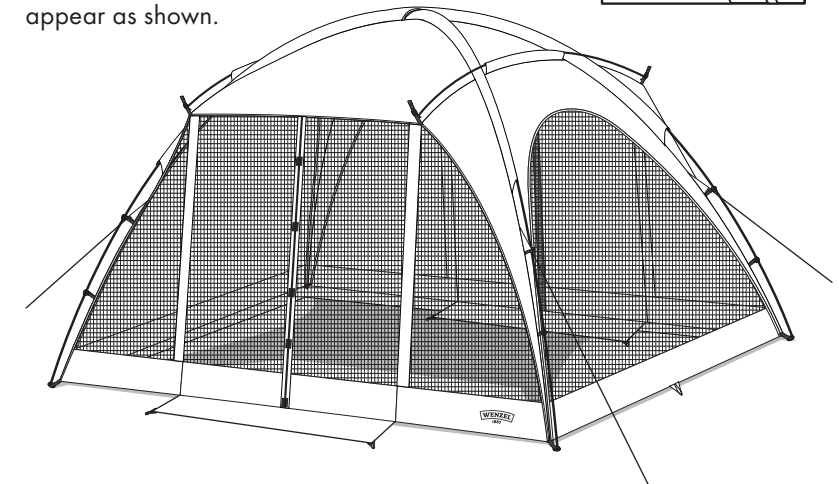

NOTE: To take down screen house, follow steps above in the reverse order. Place stakes into stake bag and poles into pole bag, which are provided. The screen house should be folded into equal parts toward the center of the screen house to distribute the bulk. Place frame on folded screen house and start a small tight roll, the width of your carry bag. Once rolled, tie a string around screen house to hold it in place. Place screen house and stake bag into carry bag. **Make sure screen house is clean and dry before storing.**